




"XDSRT-1" - Xavien Dual Stage Rocket Timer User Manual and Instructions

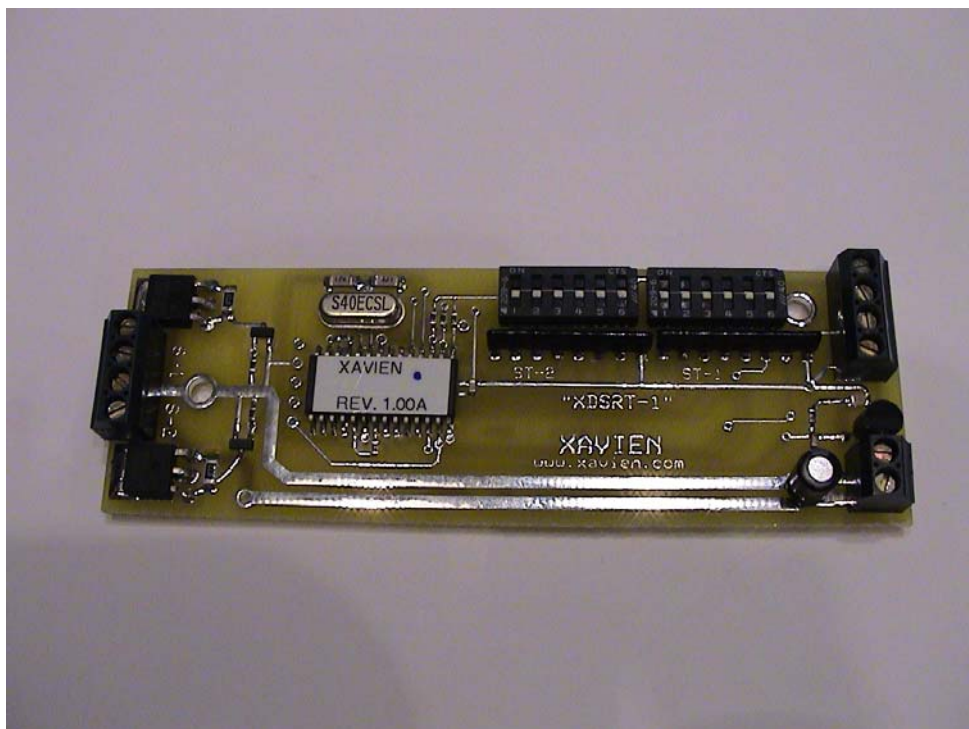

XAVIEN
PO Box 7433
Goodyear, Az 85338
www.xavien.com

System Overview

The “XDSRT-1” is a precise 1-second to 63 seconds dual stage timing system used to control the ignition system in a rocket. Time settings are set using a 6-position DIP switch that eases programming. It runs off of an external DC power supply ranging from +7V to +15V, a 9V alkaline battery is ideal for powering the “XDSRT-1”. Other applications such as relay switching and solenoid driving can also be implemented using the “XDSRT-1”. Various igniters / electric matches may be used because of the versatility and high current FETs used in the design of the “XDSRT-1”; these include, but are not limited to, Daveyfire and OXRAL.


Specifications

Battery	external 7-15 VDC
PEAK Firing Current	2A @ 10sec.
Dimensions	1.225" (+/- 0.05") W x 3.8" (+/- 0.02") L
Weight (without battery)	21.4 grams
Nominal Battery Load	15mA
Delay Settings	1 second to 63 seconds (in 1 sec. increments)

Operational Overview


Figure 1 depicts the component layout of the “XDSRT-1”. The switches are labeled 1 through 6 accordingly. The ON position for the switches are labeled at the top of each DIP switch pack.

Figure 1. “XDSRT-1” Assembly.

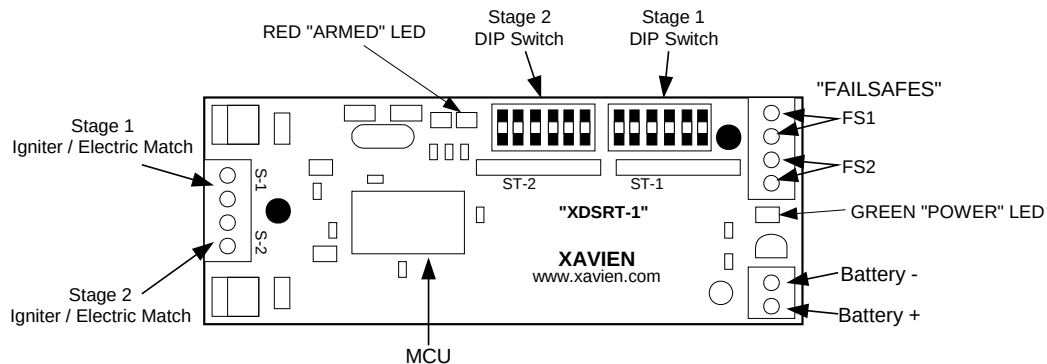

The “XDSRT-1” is designed so that the countdown for stage 2 does not begin until after stage 1 has completed its cycle. Figure 2 gives a close look at the DIP switches and explains the time value of each switch. **Stage 1 and stage 2 are independent of each other.** Table 1 gives examples of a few settings. For example, to get a delay of 10 seconds you would turn ON switch 2 and switch 4 (2 seconds + 8 seconds = 10 seconds), the rest would be OFF. The timing for stage 1 begins counting down as soon as **BOTH** fail-safes are “OPEN”. If the unit is powered up with both fail-safes “OPEN”, the unit begins counting down immediately. Make sure fail-safes are in place **BEFORE** applying power to the unit.

Figure 2. DIP Switch with all switches in the OFF position.

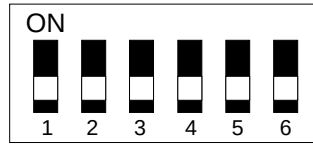

Switch	Time Value
1	1 second
2	2 seconds
3	4 seconds
4	8 seconds
5	16 seconds
6	32 seconds



**** IMPORTANT **: Switches *MUST* be set prior to turning power on to “XDSRT-1”. The microcontroller *ONLY* reads the switch settings on power up. If changes need to be made, turn unit OFF, set switches, verify failsafes are in place and cycle power back ON.**

Table 1 (Example of delay settings)

Switch Settings		Time Delay	
ST1[1, 2, 3, 4, 5, 6]	ST2[1, 2, 3, 4, 5, 6]	STAGE 1	STAGE 2
Off-Off-Off-Off-Off-Off	Off-Off-Off-Off-Off-Off	1 second	1 second
On-Off-Off-Off-Off-Off	On-On-Off-Off-Off-Off	1 second	3 seconds
Off-On-Off-Off-Off-Off	Off-Off-Off-On-Off-On	2 seconds	40 seconds
On-On-Off-Off-Off-Off	On-Off-Off-On-Off-Off	3 seconds	9 seconds
Off-On-Off-On-Off-Off	Off-Off-Off-Off-Off-Off	10 seconds	1 second
Off-Off-Off-Off-On-Off	Off-On-Off-Off-Off-Off	16 seconds	2 seconds
Off-On-On-Off-On-Off	On-On-Off-On-On-Off	22 seconds	27 seconds
On-On-Off-Off-Off-On	Off-On-Off-Off-Off-Off	35 seconds	2 seconds
Off-Off-Off-On-Off-On	On-On-On-On-On-On	40 seconds	63 seconds
On-On-On-On-Off-On	On-Off-Off-On-Off-Off	47 seconds	9 seconds
On-On-Off-Off-On-On	Off-On-Off-On-Off-Off	51 seconds	10 seconds
Off-Off-On-On-On-On	Off-Off-Off-On-Off-On	60 seconds	40 seconds
On-On-On-On-On-On	Off-Off-Off-Off-Off-Off	63 seconds	1 second

STAGE 1 = 19s


STAGE 2 = 34s



"XDSRT-1" FAILSAFES:


The "XDSRT-1" has two failsafes to protect against accidental timer countdowns / ignition. The failsafes are enabled when "FS1" and "FS2" are connected together as in figure 3. The unit will NOT begin countdown until BOTH failsafes have been "OPENED". FS1 is the primary failsafe; when FS1 is "OPENED" (ARMED) a RED LED turns on letting the user know that the unit is "ARMED". Before countdown can begin FS2 must also be "OPENED", usually the rocket does this at launch.

Figure 3. FAILSAFES "ENABLED".

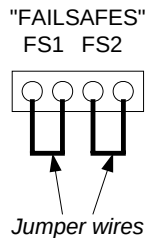

Once a failsafe has been "OPENED", the only way to reset the failsafe is to turn the power off. Once this is done you can "ENABLE" the failsafe and turn the power back on. We at XAVIEN have had good luck using "solder" as the jumper wires for the failsafes. Place the length of solder directly under the engine, when it ignites it will melt the solder and countdown will begin. Many of our users have launched rockets that are extremely powerful. This has allowed them to use the "twisted wire" technique of connecting the failsafes. Basically you take two pieces of wire and connect one end (bare wire) of each wire to the timer and the other end (bare wire) twisted to each other around something like your launch pad. When the rocket launches the wires are pulled apart and timing begins. Figure 4 shows an "XDSRT-1" set-up using both failsafes with the "pull pin" and "break wire" technique. To "ARM" the timers you turn the key lock switch "OFF", once this is done the RED "ARMED" LED should activate assuming you have the power from the battery connected and turned on. Once the rocket takes off the FS2 connection will be broken (OPENED) and countdown will begin. *Make sure you remove the "key" of the key lock switch before the rocket is launched.*

Figure 4. Basic timer configuration.

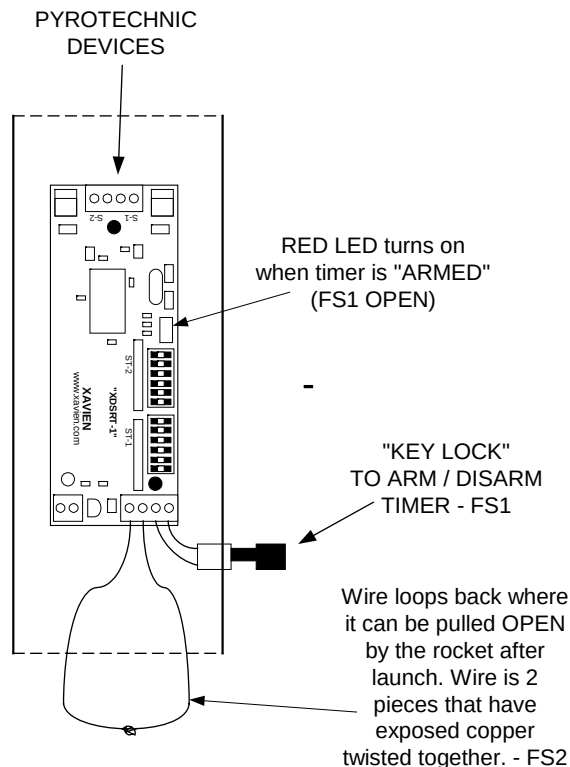


**** IMPORTANT**:** All connections (FAILSAFE settings and switch position) must be set *BEFORE* you apply power to the “XDSRT-1”.

Pyrotechnic Installation:

The “XDSRT-1” has been tested using various igniters and electric matches. To install a pyrotechnic device onto the “XDSRT-1” (*power needs to be OFF*), you simply unscrew the terminals located as in figure 5. The terminals are screw based terminal blocks for easy access and reliability. *User does not need to worry about which terminal goes to which leg of the igniter / electric match.* Make sure you **hand tighten ONLY (too much torque can damage the unit)** screw terminals after igniter / electric match has been installed.

Figure 5. Pyrotechnic device install location.

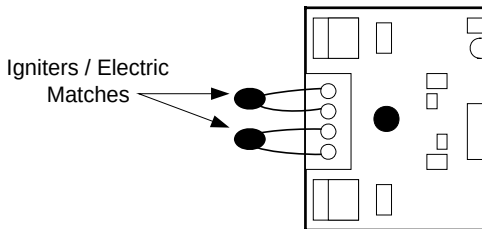

Recommended igniter / electric matches:

The “XDSRT-1” has been tested using the Daveyfire 28B, 28BR and OXRAL igniters / electric matches. It is recommended that you test the model you are using to insure proper ignition occurs. We here at XAVIEN have used igniters / electric matches that are easily available to us for testing. If you are using something different than what is listed and want to make sure it will work before buying a “XDSRT-1” email us, and we will look into testing a unit using your model of igniter / electric match. ***Our time is limited so no guarantees on how fast we can do this.***

Igniter / Electric Match Sources:


Manufacturers:

- Daveyfire
7311 Greenhaven Drive, Suite 100
Sacramento, CA 95831
www.daveyfire.com
- Luna Tech / OXRAL
148 Moon Drive
Owens Cross Roads, AL 35763
www.oxral.com
www.pyropak.com

Battery Connections:

The “XDSRT-1” was designed to operate using a 9V alkaline battery. We here at XAVIEN recommend using a switch (3A MAX CURRENT) to insure ease of use when powering the unit up and down. We have equipped the unit with a small green power indicator so the user can easily identify when the unit has power applied. It is recommended that the user do tests using their igniter / electric match configurations before “assuming” anything will work. This will help to insure that the “XDSRT-1” and your configuration will work to your expectations. In figure 6 we have a basic diagram of the battery connections that are recommended by us. **It is always a good idea to insure you have a fresh (new) battery before any launches occur. After all, the cost of a battery is nothing compared to the time and money spent on many of our users rockets.**

Figure 6. Recommended battery connections.

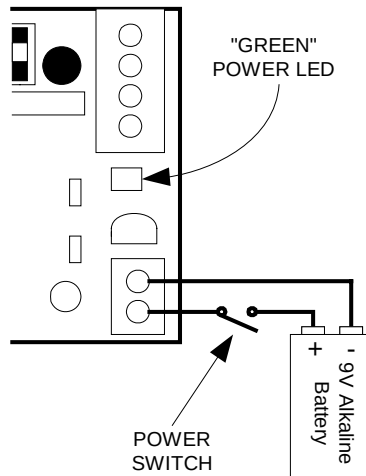


Setup Sequence:

This is the recommended sequence for setting up the “XDSRT-1”.

1. Make sure unit is **NOT** powered up, if it is turn it OFF,
2. Set DIP switches to desired time delay (both stages).
3. Install failsafes, making sure screw terminals are not loose, hand tighten only.
4. Install igniter / electric match, making sure screw terminals are not loose, hand tighten only.
5. Install a fresh 9V battery, making sure screw terminals are not loose, hand tighten only. Reversing the polarity of the battery can damage the “XDSRT-1”, when installing the battery refer to **figure 1** for the correct polarity.
6. If green LED is ON, turn switch to OFF position if you will not be immediately launching your rocket. This saves on the life of the battery. When you are ready to launch, turn switch to ON position, the “XDSRT-1” is ready to go.

Mounting / Installation

The “XDSRT-1” must be installed securely to prevent the unit from being damaged during use. Since this unit does not depend on a “g-switch”, orientation of the unit is very flexible. The mounting holes are 0.125”; this allows various size screws to be used. Just verify the clearance of both the screw and the head to insure a proper fit without damaging the unit.

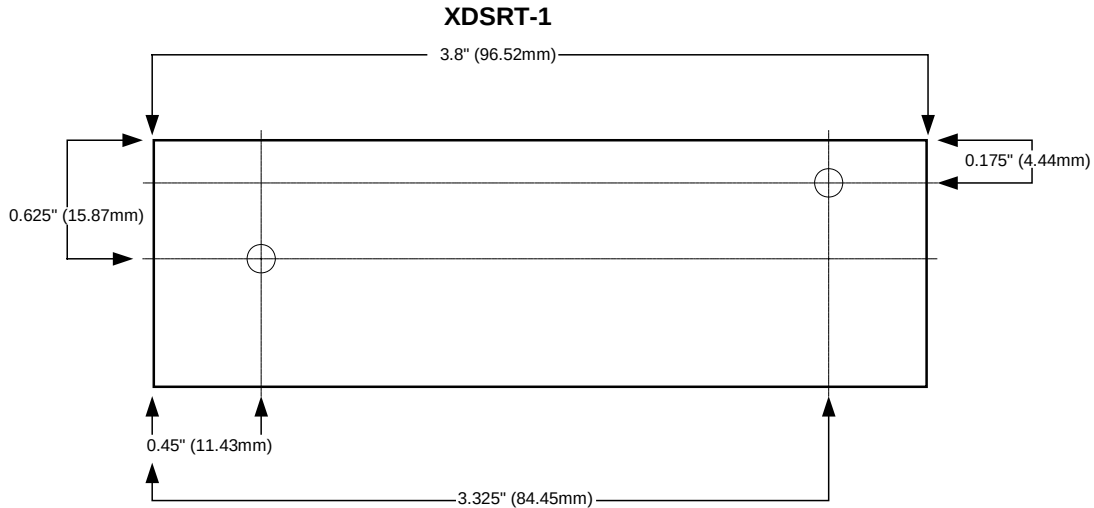

URGENT: The “XDSRT-1” **MUST** be protected from ejection charge and motor residue. These are corrosive and over time can damage the “XDSRT-1”. If this occurs, the warranty does not cover this type of damage.

**** Handling Precautions ****

These units are sensitive to damage from ESD and should always be handled in a properly grounded environment; damage from ESD is not covered under the warranty. Never transport or handle a rocket with an "XDSRT-1" that is powered up and connected to live polytechnic charges. When installing an "XDSRT-1" to igniters, make sure unit is powered off. Before cycling power ON verify that both failsafes are ARMED to prevent accidental discharge.

!! Product Disclaimer and Limit of Liability !!

Since the use and application of this equipment are beyond our control, the purchaser or user agrees to hold "XAVIEN" and their agents from any and all legal claims, demands, actions, debts, liabilities, judgments, costs and attorney fees arising out of, claimed on account of, or in any manner predicted upon loss or damage to property of, or injuries to or death of, any and all persons arising out of the use of this equipment. Due to the nature of electronic devices, the application and environments for these devices, the possibility of failure can never be completely ruled out. It is the responsibility of the purchaser or user of this equipment to properly test and simulate the actual conditions under which the device is intended to be used to ensure the highest degree of reliability, safety and success.

!! Product Warranty !!

The "XDSRT-1" has a warranty of 1 year starting from date of purchase as long as all the guidelines have been followed that are outlined in this document. Any improper use or carelessness on the part of user will void the warranty. If your unit has problems send an email to:

RMA@XAVIEN.COM

Once this has been done, XAVIEN will send you a return material authorization (RMA) number that you need to include with your unit. **DO NOT send any units back to XAVIEN without this RMA number, if we receive product with no RMA it will NOT be accepted and mailed back unrepaired.**



Revision History

PCB REV: 1.00A

FW REV: 1.00A

DOC REV: 1.01A

DATE: 08/04/2003

DATE: 08/04/2003

DATE: 08/09/2005 [UPDATED LOGOS]